

A-Trick 500 *Classic*User Guide







Product Specifications

Model A-Trick 500 classic

Dimension 313*99*206 mm


Machine N.W. 3.5 Kg

Voltage DC 12V - 1A

Power 10 W

Bottle Capacity 500 ml


Coverage up to 500 m2/5000 ft2

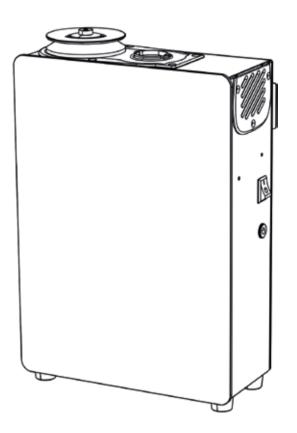




Essentials part of your product


Make sure nothing is missing from the items below:

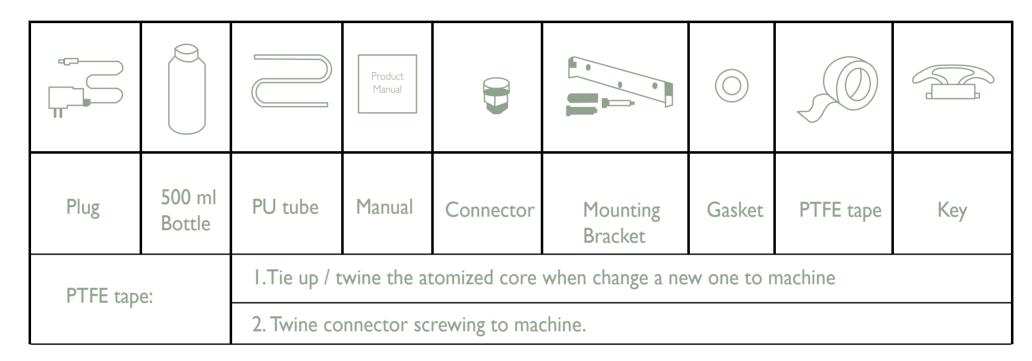

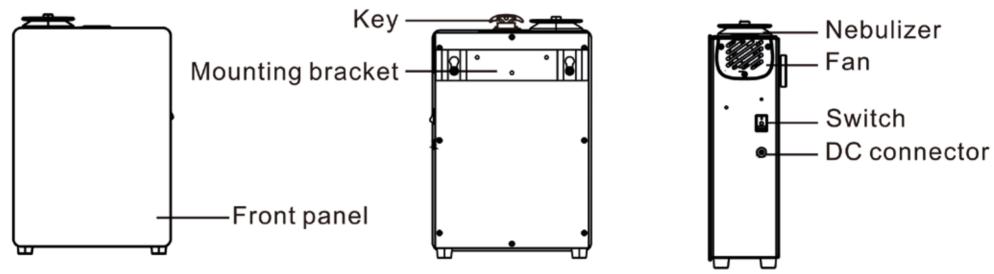



Mount to the Wall

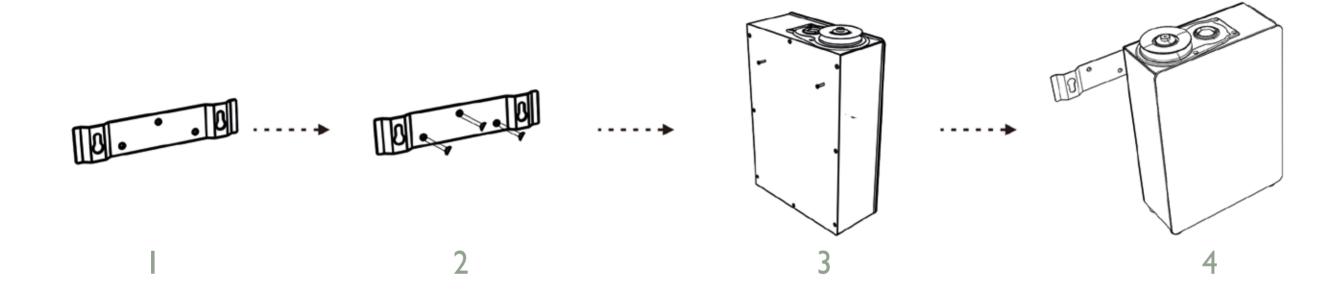

- I. Align the bracket and drill holes in the wall.
- 2. Press the expansion tubes into the wall holes, and wall mount the bracket with screws.
- 3. Screw in the back of the machine.
- 4. Attach the machine to the bracket.



Bottle Installation Steps



- I. Insert the key to release the bottle.
- 2. Rotate the key clockwise to unlock.
- 3. Unscrew and take out the atomized head, then fill with fragrance. For the best result, leave 15% of the bottle empty to allow enough space for mist circulation
- 4. Insert the atomized head and bottle.
- 5. Take out the key







do not tilt/turn/move when bottle is in device


Let's get you started by downloading the app









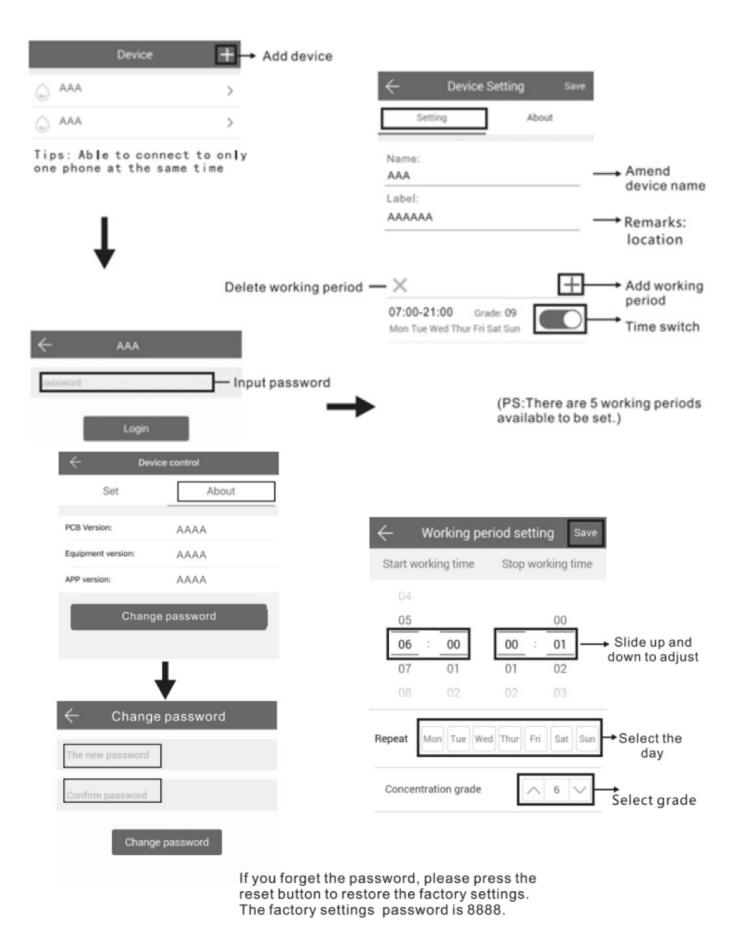



Boost your experience with our set-up tips

- The increase in the grade is likely to result in higher consumption.
- Our recommendation is to start by grade 8 then increase or decrease based on your preference.
- Less hours of operation results in extending the life of the bottle.
- We recommend to operate the aroma device for half an hour before the activity/the event begins







Shall not modify, disassemble or repair the machine arbitrarily. vv



Shall not damage the power cord, force to bend, yank, heavy load, clip or reprocess.



- o Shall not use the AC plug when it is damaged or un-matched with the socket.
- o Shall not wet the machine or the AC plug.
- o Shall not use overloaded power socket, wire or broken plug.



Shall not touch the wire or product shell when thundering or/and lightening.



Shall not disassemble the machine when it is under operation.

For any inquiry, please contact our live installation assistant



Warning:



- After installation, please keep the machine vertical, tilting the machine flat will cause oil leakage and damage to the machine.
- Do not refit, disassemble or repair the machine if you are not a technician. If the machine breaks down, please contact our customer care for help customercare@aromatrick.co.uk
- It is invalid to touch/tap the digital timer button when machine is under lock status.
- Each time cycle should be between (00:01 until 23:59), if you need your device to operate throughout the night time, make sure you divide the operation time to two cycles.





TROUBLESHOOTING



Before asking to have the machine repaired, please try to diagnose the problem first following the instructions below:

Symptom	Remedy
Does not diffuse	 Check the power is on or off if the machine is in "not working period", it stops diffuse. the pump is damages, change a new one.
Spray little	 Atomized nozzle may be blocked, diffuse with alcohol to do cleaning. pump is aging, change a new one.
Spray liquid	 Atomized nozzle is damaged, change a new one. machine is tilted or lay flat, please make it stand on end.
Oil spill	bottle is loose, screw it to the right place.
Abnormal sound	Pump is loose, install it correctly.

• If the machine programs crashes or other abnormal condition occurs, please restart the machine to restore factory setting (method: press ENT key about 5 minutes until you hear "beep" sound)

CLEANING DIFFUSER



Diffuser should be cleaned regularly, timing recommendation below:

- I. Refilling/ changing fragrance in reservoir.
- 2. Scenting strength becomes weak.
- Turn off Scenting Diffuser before cleaning.
- Place clean bottle with small quantity of "Methylated Spirits" Industrial alcohol.
- Turn on Machine and let diffuse for 5 minutes.
- Turn off power and unscrew cleaning fluid bottle.
- Replace with fresh fragrance, machine is now ready for diffusing.

