

Roma
trick

A TRICK 1500 ECO+



Manifest Brand Development Ltd

Company Reg. Number 13498335, VAT Number GB 424451222, customercare@aromatrick.co.uk

Caveat

1. After installation, please keep the equipment vertical, please do not invert, tilt or flip the equipment, in order to avoid oil leakage, resulting in equipment damage.
2. Please do not use overloaded power supply, socket, and broken power cord and plug, if used it may jeopardize your safety and may cause a fire, if such a situation occurs, please give feedback to the sales or after-sales department in time and ask for a replacement.
3. Please do not try to open the product shell, so as not to damage the product, if you are not a technician, shall not modify, disassemble or repair the machine and equipment. If abnormalities occur in the use of the product, please consult the sales and after-sales in a timely manner.
4. When the equipment is working, please do not disassemble the equipment, or vigorously shake the equipment, which will lead to abnormalities in the work of the equipment.
5. Do not place the product or power adapter in water or drenching, do not use the drenching power adapter.
6. Do not operate the equipment or touch the power cord when there is thunder in natural weather to avoid the risk of electric shock.

Product parameters

Product size: 183*183*630mm


Essential oil capacity: 500ml / 1000ml

Coverage: 2000-3500m³

Voltage: DC12V

Rated power: 9W

Product weight: 5.5kg

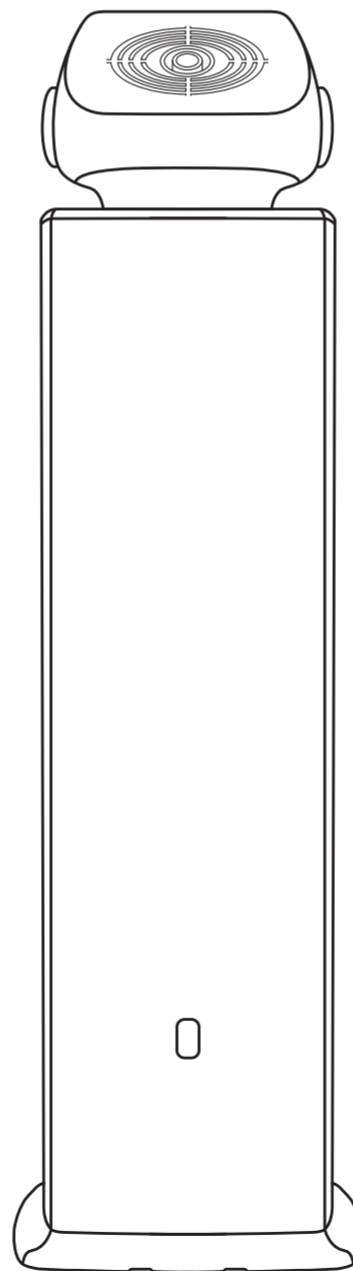


Packaging accessories



Remote
Controls



Oil Bottle

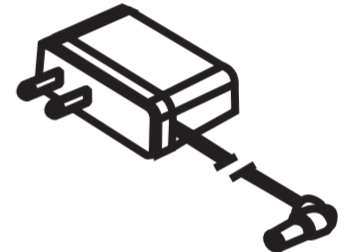

Adapter



Atomizing
Nozzles





Pe Gasket




Manual


Operation instructions

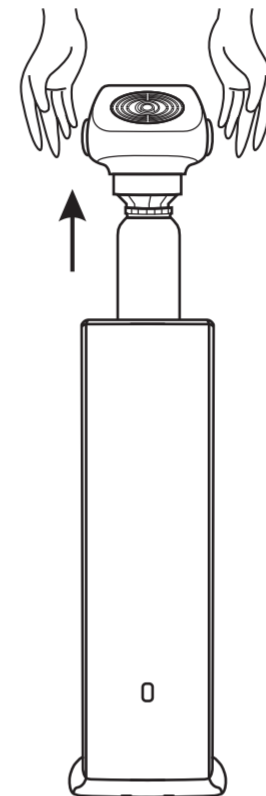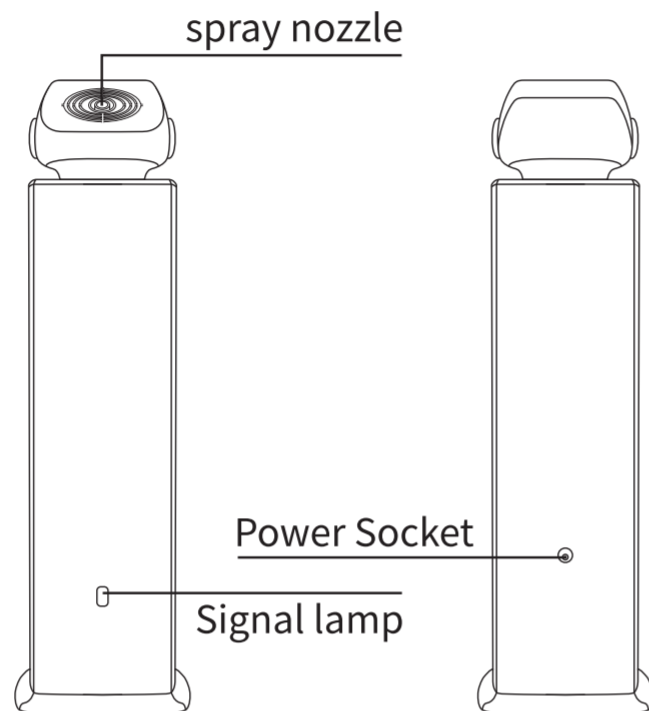


① Pull up the top atomizer head;

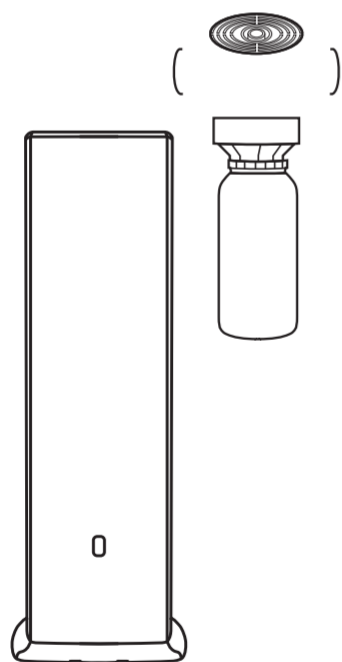

② Pull out the atomizer head and essential oil bottle as a whole;

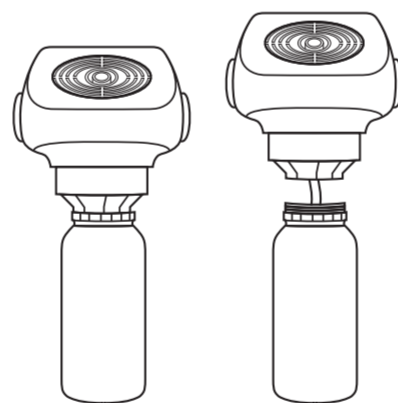

③ Remove the essential oil bottle, add the essential oil and place it back in the atomizer head;

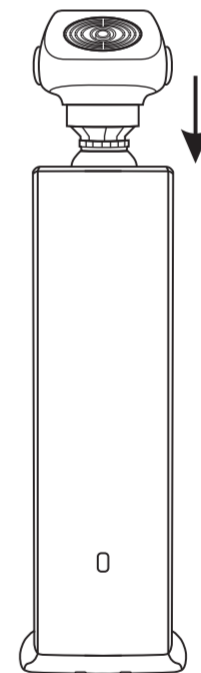

④ Insert the nebulizer head into the body of the Plug in and use the unit.

Setting

◆ The device is powered on:

Equipment indicator working status: access to the power supply, manually turn on the equipment power, this time the indicator on the device will show the operating status: Red light: hibernation; red light flash: shutdown (shutdown state of any setting is invalid); blue light: spray; red and blue lights alternately flashing: spray pause.

◆ Remote control display status:

The remote control is loaded with two seven batteries, the remote control LCD screen shows the working status: 【ON/OFF】 Display ON means the device is in the running time period, display OFF means it is not in the time period.

【ON/OFF】 Display ON means that the equipment is in the running time period, display OFF means that it is not in the time period.

【WORK/PAUSE】 Display WORK means the machine is in working state, display PAUSE means the device is in suspended state.

◆ Remote control button functions are described in detail:

The unit allows 4 operating periods to be set, and the unit's working day can be selected according to a number of options.

Press the **【⏻】** key to start the unit and enter the regulation mode, then press the **【⏻】** key to stop the unit from running.

Press the **【SEND】** key to transmit the running program already set in the remote control to the equipment control board.

【MODE】: switch different page options, first time period start time, stop time, flavor concentration. Second time period start time, stop time, flavor concentration. Third time period start time, stop time, flavor concentration. Fourth time period start time, stop time, scent concentration.

【SET】: Enter the setting status, you can skip the setting contents of the current page: including time, date, concentration, etc..

【UP】: upward fine-tuning, you can adjust the current time period data, spray fragrance data, working date selection.


【DOWN】: downward fine-tuning, you can adjust the current time period data, fragrance data, working date selection.

【🔒】: Long press for 5 seconds to lock all the keys, then press again for 5 seconds to unlock.

① Press **【⏻】** or **【SEND】** button when the remote control aligns with the signal light of the device, there will be a sound when the device receives the signal, and the indicator light will flash sharply for 5 times, if there is no sound or the indicator light doesn't flash sharply, it means that the device doesn't receive the signal.

② Press **【SEND】** to execute the command only after the device is turned on, the device in shutdown state will have sound and indicator flash rapidly, but will not execute the operation.

Remote Control Interface

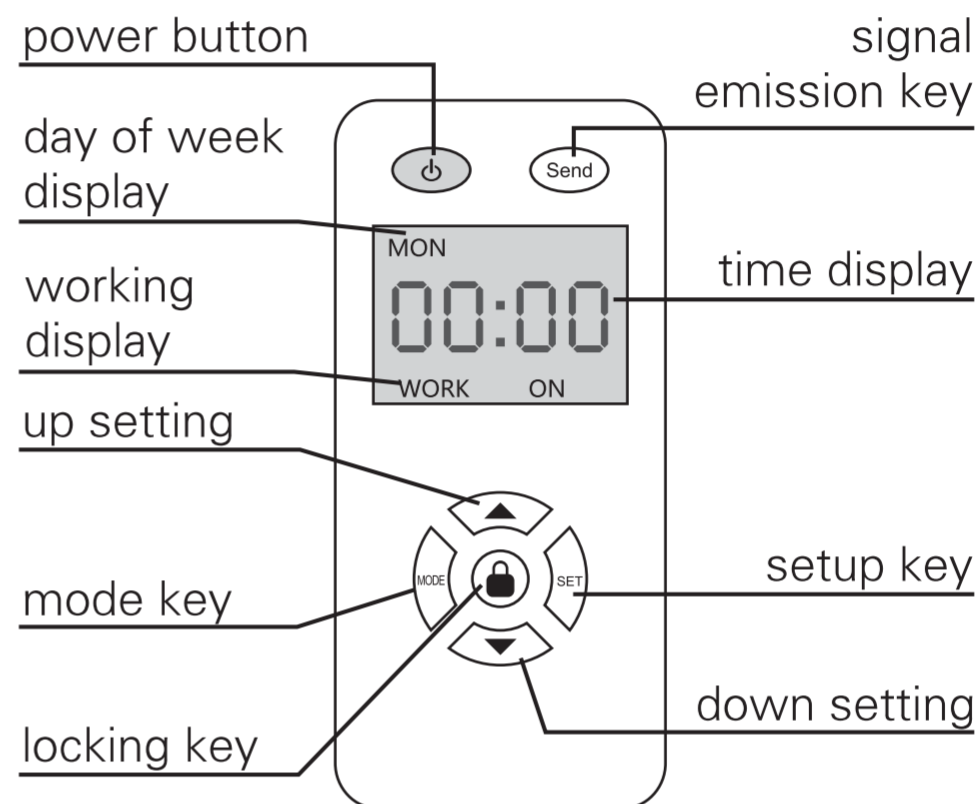



◆ Equipment operating hours and regulation of flavor concentration:

Press **[MODE]** key for the first time: **[EVENT 1 ON]** is displayed on the LCD screen to enter the first working start time setting, press **[SET]** key to activate the hour count flashing and set the hour by **[UP/DOWN]**. Press the **[SET]** key for the second time to activate the minutes flashing and set the minutes via **[UP/DOWN]**. Press **[SET]** a third time to activate weekday digit flashing and set weekday via **[UP/DOWN]**.

(Note: Setting the day of the week can only be set when EVENTON is displayed on the LCD)

Press **[MODE]** key for the second time: **[EVENT 1 OFF]** is displayed on the LCD screen to enter the first segment of the work end time setting, press **[SET]** key to adjust, set the number of hours and minutes through **[UP/DOWN]**.

Press **[MODE]** key for the third time: **[SCENT/WORK]** is displayed on the LCD screen to set the equipment working time for each spray cycle. The time period is 10 seconds-300 seconds, which can be adjusted by pressing the **[UP/DOWN]** key for 5 seconds at a time.

Press **[MODE]** key for the fourth time: **[SCENT/PAUSE]** is displayed on the LCD screen to set the equipment pause time for each spray cycle. The time period is from 10 seconds to 300 seconds and can be adjusted by pressing the **[UP/DOWN]** key for 5 seconds at a time.

Repeat the above settings and continue to press the **[MODE]** key until all 4 time periods have been set.

① (The functions of the second, third and fourth time periods are the same as the first time period)

② (When setting the running time period, the shutdown time must not precede the startup time. (If the operation period needs to cross over 00:00, it is necessary to set the two time periods separately.)

◆ Setting the system time:

Adjust the setup time as well as the use time and current time period, the system time is 24 hours system.

Press **[SET]** key for the first time: the hours of the time period flashes, press **[UP/DOWN]** to adjust the hours.

Press **[SET]** key for the second time: hours are set, minutes flash, fraction is set, press **[UP/DOWN]** to adjust.

Press **[SET]** key for the third time: minutes are adjusted, current weekday flashes, set weekday, press **[UP/DOWN]** to adjust.

Press **[SET]** key for the fourth time: Confirm the system time setting is completed.

If there is no need to set separate time periods, the first time period is set, press **[SET]** key to enter **[SECNT/WORK]** mode directly.



◆ Date options: you can select a combination of working days

(Mon-Sun) (Mon-Wed) (Tue-Thu) (Mon-Fri) (Sat-Sun) (Mon-Sat) (Mon-Sat) (Mon-Tue) (Tue) (Wed) (Thu) (Sat) (Thu-Fri) (Sat) (Thu-Sun) (Mon-Thu-Fri) (Tue-Thu-Sat)

◆ Restore factory settings

Long press the [MODE] key for about 15 seconds, the unit will be restored to the factory setting. The factory setting mode is: work every day, work time period 08:00-22:00, work 60 seconds, pause 60 seconds.

Maintenance

In order to ensure that the best aroma effect, please customers regularly on the setup time check and maintenance, as follows:

- 1, open the equipment face cover, take out the used up essential oil bottle;
- 2, Every time you replace the essential oil, you need to clean the essential oil filter;
- 3, the appropriate amount of alcohol poured into the essential oil bottle, clean;
- 4, after cleaning, then pour a small amount of alcohol and install it on the equipment, turn on the equipment to work for 5 to 10 minutes.
- 5, Replace the PE gasket.

(Six months maintenance once, or need to replace the new fragrance, as well as found that the fragrance is getting fainter and fainter)

After-sales service

Equipment to the date of sale, one year warranty, but does not warranty shell, wire and other perishable objects, man-made or accidental damage is also not covered by the warranty, beyond the free warranty period, the implementation of paid maintenance.

If you encounter any after-sales problems, please contact the regional authorized sales service providers, or contact our sales center.

*Due to the continuous improvement of our products, they are subject to change without prior notice.

Troubleshooting

| Problem | Prescription |
|---------------------------------|--|
| Equipment not working | <ul style="list-style-type: none"> ① Check if the power supply is energized ② Check if the wrong power supply is used. ③ Check the machine setting working time. |
| No atomization | <ul style="list-style-type: none"> ① Check the color of the indicator light on the machine. ② Check whether the air pump is working and whether the atomizing core is clogged. ③ Check whether the air tube seal is broken or detached. ④ Check whether the suction pipe is clogged or detached. |
| Small atomization volume | <ul style="list-style-type: none"> ① Check whether the air outlet pipe seal is broken. ② Check whether the atomizing nozzle is clogged. ③ Check whether the atomizing core and atomizing nozzle are loose. |
| Oil leakage | <ul style="list-style-type: none"> ① Check if the atomizing head is broken. ② Check if the gasket is damaged and needs to be replaced. ③ Check whether the essential oil bottle and atomizing head are tightened equally. |
| Abnormal noise | <ul style="list-style-type: none"> ① Check if the air pump is loose, just fix it again. ② Check if the air pump is damaged, replace it with a new one. |

Caution



Shall not modify, disassemble or repair the machine arbitrarily. vv



Shall not damage the power cord, force to bend, yank, heavy load, clip or reprocess.



- o Shall not use the AC plug when it is damaged or un-matched with the socket.
- o Shall not wet the machine or the AC plug.
- o Shall not use overloaded power socket, wire or broken plug.



Shall not touch the wire or product shell when thundering or/and lightening.






Shall not disassemble the machine when it is under operation.

For any inquiry, please contact our live installation assistant



Warning:

- After installation, please keep the machine vertical, tilting the machine flat will cause oil leakage and damage to the machine.
- Do not refit, disassemble or repair the machine if you are not a technician. If the machine breaks down, please contact our customer care for help customercare@aromatrick.co.uk
- It is invalid to touch/tap the digital timer button when machine is under lock status.
- Each time cycle should be between (00:01 until 23:59), if you need your device to operate throughout the night time, make sure you divide the operation time to **two cycles**.

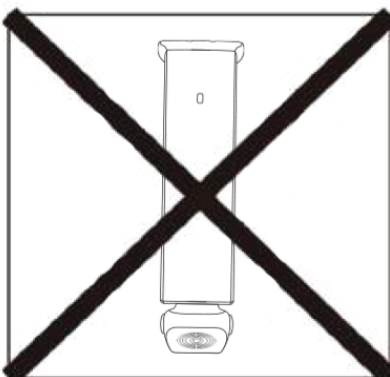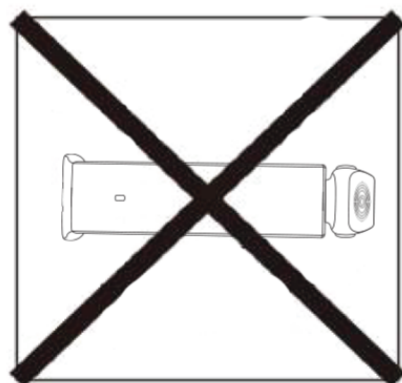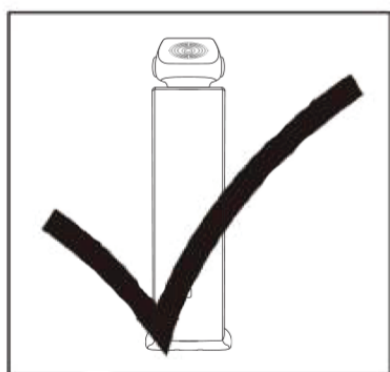

do not tilt/turn/move
when bottle is in device

Roma trick